


American Retail Supply Assembly Instructions

Spiral Rack - 428110

Parts List:

- 1 - Weighted Base
- 1 - Long Pole (33 3/4") with Bolt & Washer attached
- 1 - Long Pole (33 3/4") without Bolt & Washer
- 2 - Short poles with end rings (1 screw each)
- 1 - Spiral Curve with 29 balls
- 1 - Large round 2" diameter Pole Support
- 1 - Small Allen wrench
- 1 - Large Allen wrench

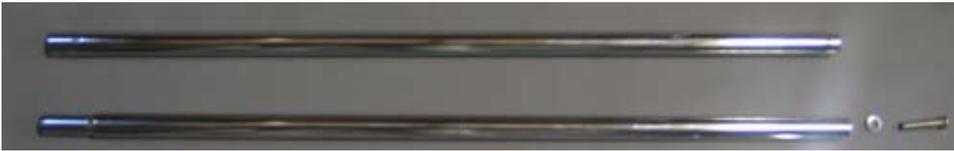

Close Up of pole with Bolt and Washer



1. Attach long pole with bolt and washer attached to the Weighted Base, Using the provided Allen wrench attach in this order from bottom to top: Bolt, washer, weighted base, Large Round 2" pole support, long pole. (see images below)



Bolt & Washer inserted into bottom of Weighted Base (tilted to the side)



Topside of Weighted Base, with Bolt threaded through 2" Pole Support (tilted to the side)



Bottom pole attached to Weighted Base, sitting in pole support, and screwed in using Large Allen wrench

2. The "top" long pole is inserted onto the "bottom" pole. (see image)
To keep in place, twist top pole either left or right.



3. Unattach screws from Short Poles. Insert the small end of each rod into the allocated female part on the Spiral Curve, and screw into place (see images below).




Short poles (ring at one end) and screws



Short pole attached to Spiral Curve

3. Slide Spiral Curve with attached short rods over Long (top pole) and adjust height where necessary. Secure into place using Small Allen wrench.

Use Small Allen wrench to tighten

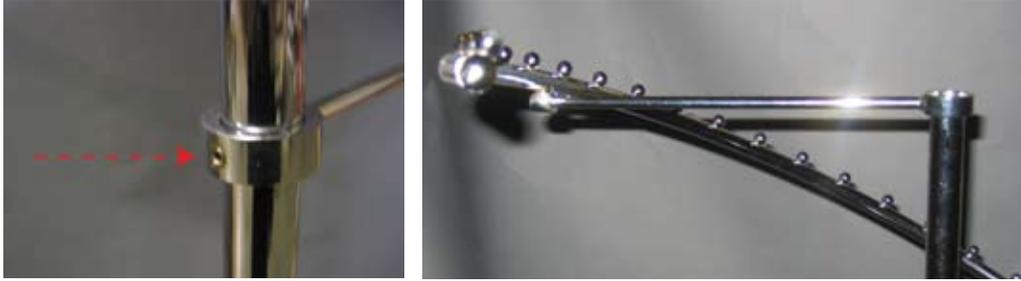

4. Spiral Rack should look like this when fully assembled.

